

1-2 Pair Drop Wire Clamp


1, Used to support one and two pair telephone drop wire at span clamps, drive hooks, and various drop attachments.

2, Tail wires are formed from 430 Stainless Steel


3, Stainless Steel Drop Wire Clamps are available with Stainless Steel shims

4, Stainless Steel Drop Wire Clamps are made from 304 Stainless Steel

5, Drop Wire Clamps shall hold, without slippage, a suitable length of drop wire until sufficient load is applied to break the drop wire or to a maximum load of 555 pound

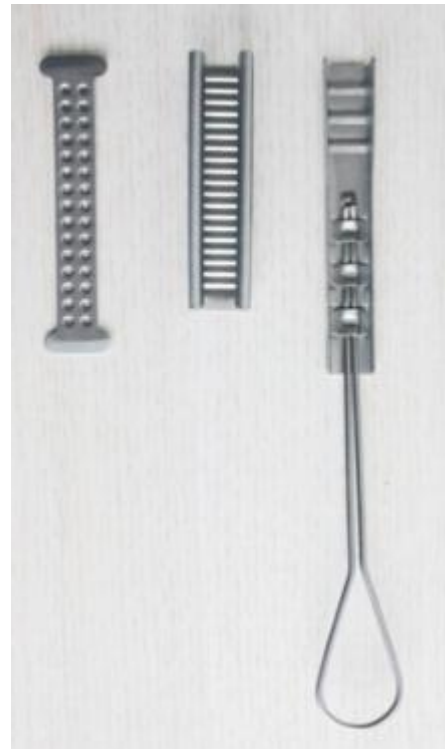


1-2 Pair Drop Wire Clamp Installation

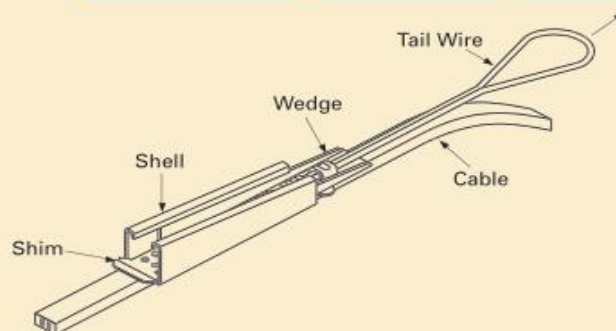

1

Place Drop Cable into Shell

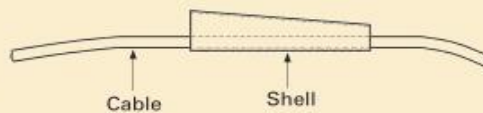

2

Place Shim over Drop Cable on opposite side as Shell



3

Pull Tail Wire so Wedge is deeply seated in Shell

